



# VTech InnoTab 2s Back Panel Replacement

This guide will help you remove the back cover of the device.

Written By: Ricardo Espinosa





## TOOLS:

- [JIS Driver Set](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Metal Spudger](#) (1)
-

## Step 1 — Back Panel



- Turn your device to where the back panel is facing you.


## Step 2



- Lift the Leg all the way up and twist the bottom to remove.
  - Once the bottom part pops out the whole leg should just come off.
  - Remove any game cartridge from the device.




### Step 3

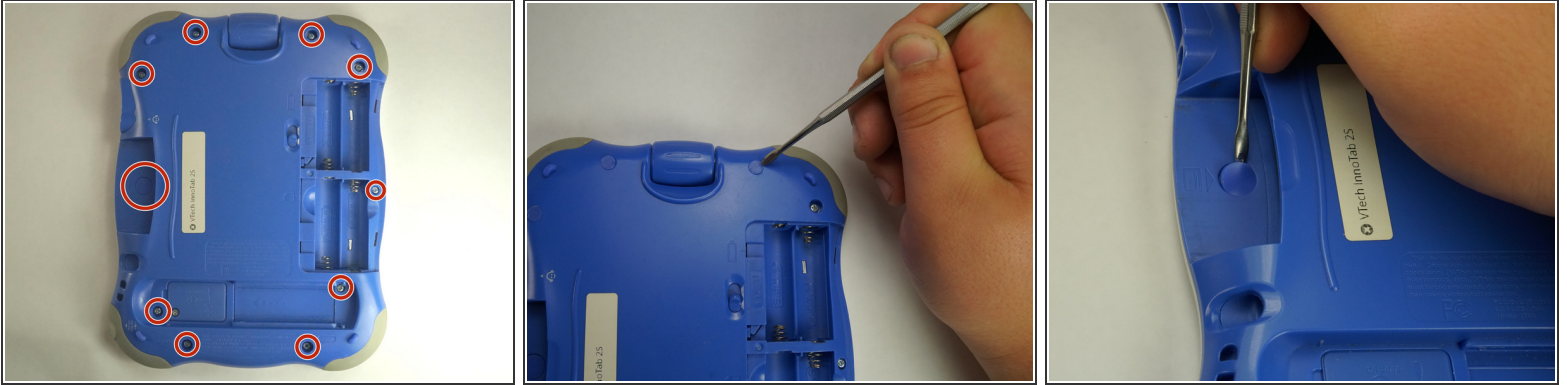

- Remove all of the plastic tabs on the device. These are covering screws that will need to be removed.
- ⚠ These covers are made of hard plastic so they may be difficult to remove.
- There is a special tab in the cartridge cover that is made of rubber, make sure to not break this tab.

### Step 4

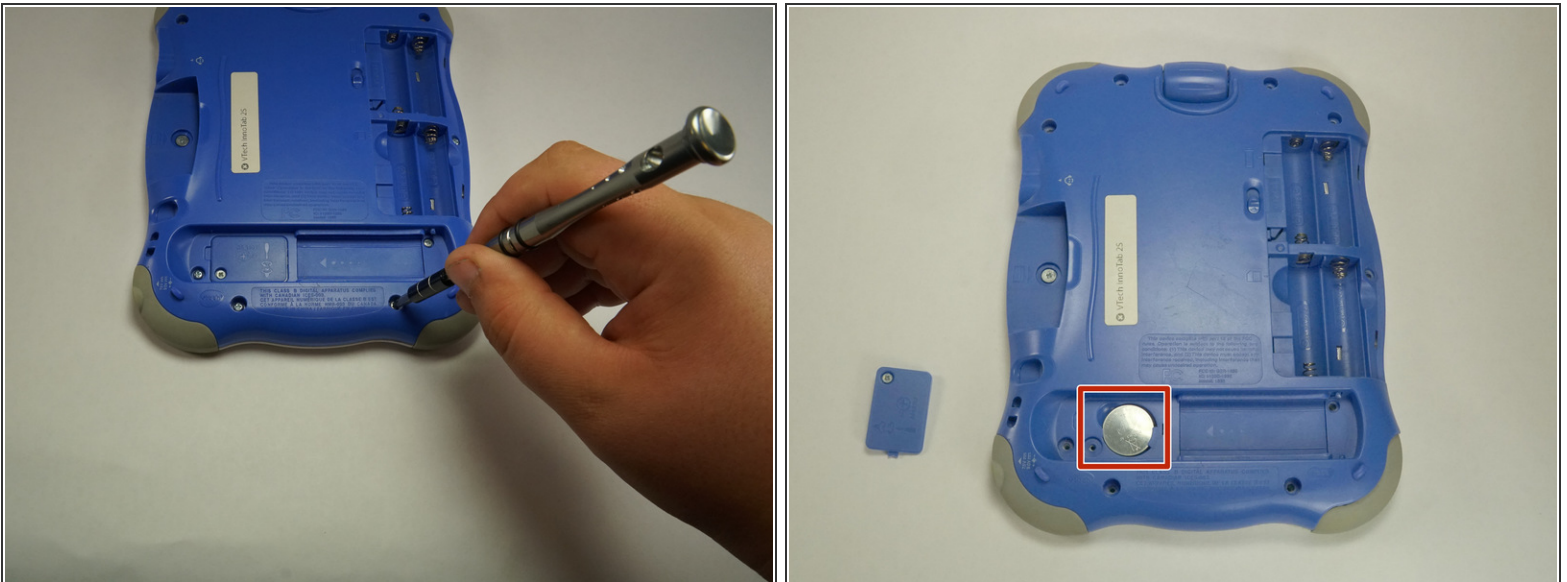

- Remove all nine screws from the back of the device using a J0 bit.
- Remove the small battery.

## Step 5



- Using a plastic opening tool, detach the backplate from the front piece.
  - ⚠ Do not use excessive force. Double check that you removed all the screws if the panel is not coming off easily.
- Once the backplate has been removed, you will have access to the circuit board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-25 06:30:47 PM.